




## PIN Code set remotely via my.danalog.com


### Step 1 :

- Go on the website: [my.danalog.com](https://my.danalog.com) (1)
- Get connect with same login than the app (2)

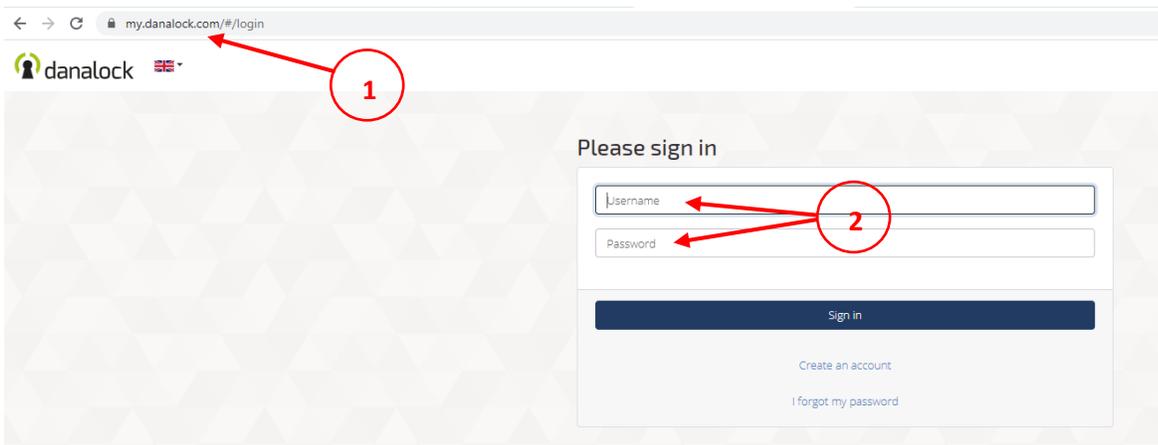



### Step 2 :

- Select the Danalog that you want to control with a new Pin code

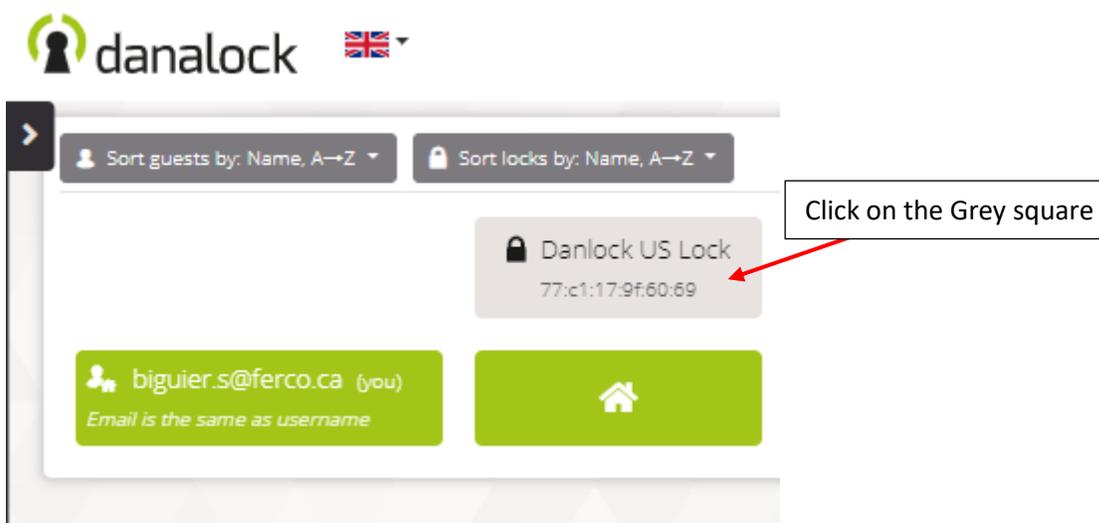

**Step 3:**

- New page is popping-up
- Click on the 'Pin Codes' section (1)
- Click on the 'Create New' button (2)

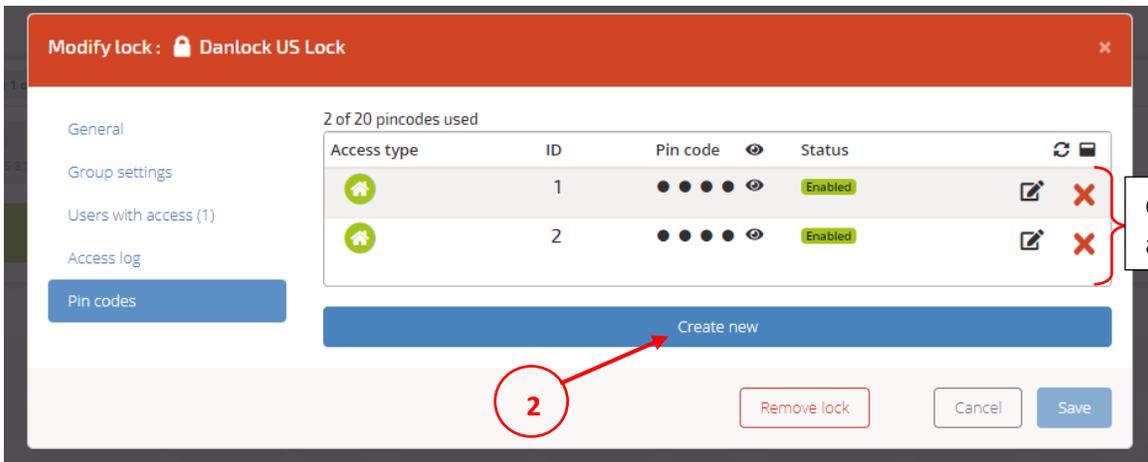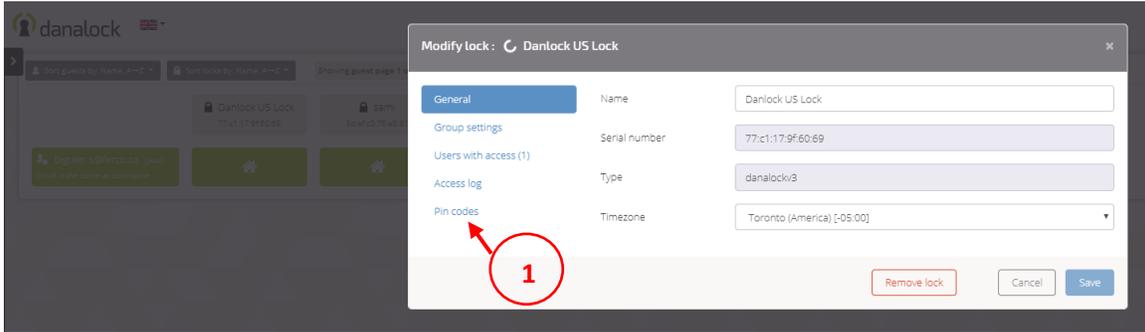

Step 4 :

- New page is popping-up
- Enter the new pin code desired (e.g. 12124545) (1)
- Validate by clicking on the 'Create' button (2)

