
## **Operation & Maintenance Instructions**

for GU-SECURY Automatic Door Lock and Lever Handle



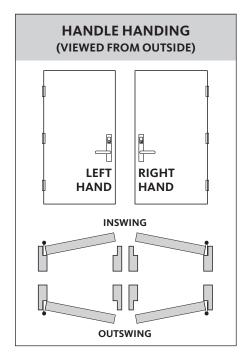



## **CARE & MAINTENANCE**

To prevent build-up of surface contaminates possibly resulting in hardware surface deterioration and in some case appearance of rust; we recommend to wipe down with soft cloth all visible surfaces with warm water and mild soap. Then wipe the same surfaces with a clean cloth and warm water only and let surfaces dry completely. This procedure should be done a minimum of 2 times per year. The use of caustic cleansers or chemicals should be avoided.


For the handle set, all finishes except Oil Rubbed Bronze (05), it is strongly recommended to apply a non-abrasive automotive wax to protect the surface.

In order to ensure the smooth operation of the lock over a long period of time, it is necessary to lubricate all movable parts and locking points ( 🖎 ) using acid and resin-free lubricants.

Ferco Architectural Hardware Inc. 2000, Rue Berlier Laval QC H7L 4S4 T 450.973.1437 F 450.973.7661 1.800.355.8810

## **CLOSING & LOCKING (1**) Latch

- (1) DON'T NEED TO LIFT THE HANDLE As soon as the door closed, the Automatic latchbolts instantly throw 20mm and are secured to prevent them from being forced back.
- (2) Operate the cylinder or the knob with a single 90° turn to engage the dead bolt and lock the mechanism.

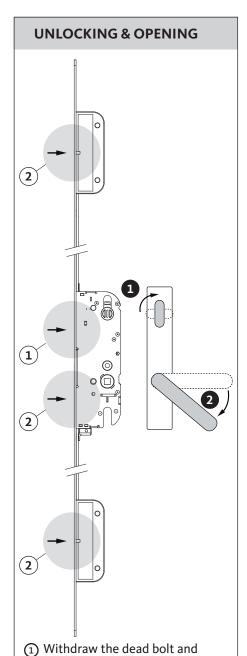

knob with a single 90° turn. (2) Press down the lever to withdraw the locking points and open the door.

operating the cylinder or the

release the mechanism by





